

# Fobis Technologies Inc.

"creators of the weemote®"

## weemote® and weemote® Sr.



## REFERENCE GUIDE

*For Product Codes R7 and Later*

## WELCOME

This Reference Guide is designed to allow you to get the most out of your weemote®.

Please note that you must have the companion Quickstart Guide in order to do all the basic programming of your weemote®. This guide takes you beyond the basic setup information in the Quickstart Guide.

**Please look over the System Options section on Page 4-5 to see what additional settings are available. There are many options and settings available, allowing you to custom tailor your weemote® for just about any situation.**

You will also find a Troubleshooting section in this guide, should you run into any difficulties during your setup.




We also encourage you to register your weemote® so we can inform you of other cool gadgets we are working on. You can register on-line at our web site or fill out and mail or fax back the enclosed registration card.

We hope you enjoy the most configurable, simple to use remote on the planet!

## TABLE OF CONTENTS

Welcome .....	2
Table of Contents .....	3
System Options .....	4-5
Searching for your Code .....	6
Code Recall .....	7-8
Channel Changing Options .....	8-9
Learning Buttons .....	9-11
Clearing Learned Buttons .....	12
Clearing Favorite Channels .....	12
Clearing the TV or Set-Top Code .....	13
Disabling the Volume Control .....	13
Channel Up/Down Options .....	14
Powering up to Favorite Channel #1 .....	14
Adjusting Channel Changing Speed .....	15
Adjusting Button Delay .....	15-16
Set-Top or TV Power On/Off Option .....	16-17
Power On TV Input Option .....	17
DirectTV Pre-Set Configurations .....	18
System Resets .....	19
Finding your Product Code .....	20
Troubleshooting .....	20-22
Care and Maintenance .....	23
Warranty .....	24

Please note the conventions used this guide to specify the state of the LED light on the weemote during programming:

-  light is on solid
-  light blinks
-  light flashes quickly

## SYSTEM OPTIONS

If you followed all the appropriate steps in the Quickstart guide, your weemote® should now be ready for use. At this point, you should consider other options you can set to enhance the weemote's functionality for your specific needs. These options can be programmed now or at anytime.

**1. Volume Control.** You can turn this control completely off which is useful in cases where you don't want the user to control the volume with the weemote®. See Page 13. By using the learning feature, you can also take the existing remote you use to control the volume in your home theater system and learn those signals on to the weemote® volume control. See Page 9 on how to learn signals from your existing remote to the weemote®.

**2. Learning Special Buttons.** The weemote® allows you to learn selective button controls from your existing remote to any dedicated favorite channel button #1-#5, the MUTE button and the Volume Up/Down button. For example, you may want to have the last channel or sleep timer control on your existing remote available on the weemote®. To use the learning functions, please see page 10.

**3. Channel Up/Down Control.** For the weemote®, the channel up/down control is factory set to only cycle through the favorite channels you have programmed into the weemote®. For the weemote® Sr, the channel up/down control is factory set to go to all channels, just like a standard remote. You have the option to change these settings or to turn this control off altogether. See Page 14 for more information on how to change this option.

**4. Powering up to Favorite Channel #1.** The weemote® can be set to go to the Favorite Channel assigned to the Favorite #1 button whenever the user presses the RED power button. Note that this feature may not work with all devices. See Page 14 for information on how to set this option. .

## SYSTEM OPTIONS

**5. DirecTV Settings.** If you are a DirecTV subscriber, this feature will pre-set both the Sat. Receiver code and all the children's channels available on your system. Pre-set commands are available for subscribers who have either the Total Choice or the Total Choice Plus Package. See Page 18 for more information on setting this option.

**6. Set-Top/TV Powering.** You can set the weemote to NOT turn your Set-Top or TV on and off whenever the RED power button is pressed. See Page 16 for more information on how to set this option.




**7. Speed Adjustment.** With this option, you have the ability to speed up or slow down that rate at which the weemote sends channel changing information to your TV or Set-Top device. You can essentially "tune" the weemote to send the favorite channel information at the fastest possible speed, ensuring the highest reliable channel changing possible. See Page 15 for more information on how to set this option.




**8. Keypad Delay.** In some cases, your TV or Set-Top device may need more time before it can process another request to change to another favorite channel. In this case, the channel digits from one favorite channel may blend into another favorite channel, causing the device to change to an incorrect channel. This can happen if the user is pressing and releasing the favorite channel buttons too quickly. **Note that this can also happen if your device requires a Select or OK button be pressed after you enter in a channel number from your existing remote - See Page 8 under the section, "Channel Changing Options".** There are also cases when a TV or Set-Top device can actually handle the information faster than the standard delay set in the weemote®. In these cases, you can tweak the delay to match up more directly with your device. See Page 15 for more information on setting this option.


## SEARCHING FOR YOUR CODE




There may be cases where you cannot locate your brand or a code number to operate your device. In this case, you need to search for your code as described below.

1. Turn on your TV or Set-Top device that needs a working code.

2A. **If searching for a TV**, press and hold down the  button until the LED light turns on solid GREEN , then release the  button.

2B. **If searching for a Set-Top device**, then press and hold down the  button until the LED light turns on solid GREEN , then release the  button.

3. Press and release the top portion of the volume control (Volume Up) about every .5 seconds while pointing the weemote® at the device you are searching. 

4. As soon as the device turns off, press and release the RED power button to see if the device turns back on. If the device does NOT turn back on, then turn the device back on manually and proceed with searching on as described in Step 3. If the device does turn back on, then press and release either the  button (if searching for a TV) or the  button (if searching for a Set-Top device). The LED light will blink three times  and then turn off. The code is now stored in the weemote®.

5. Test all the buttons to make sure the code is an exact match. In some cases, you may have a code that only works some of the buttons and not others. If this happens, go back and try searching for a better matched code. Note that when you resume your




## SEARCHING FOR YOUR CODE




search, the weemote® will begin the search from the last point where you stopped. You will be able to tell if you have reached the end of all codes searched as the LED light will flash ORANGE.



*Please note that if you press the volume UP button too fast and pass over the code that turned your device off that you can always press and release the Volume DN part of the volume control to go back to the proper code. In this case, watch for the device to turn back on.*

## RECALLING YOUR CODE

After entering in a code number or searching and finding a matching code, you can have the weemote blink back the actual code number you are using.

1A. **If you want to recall the TV code**, then press and hold down the  button until the LED light turns on solid GREEN , then release the  button


1B. **If you want to recall the Set-Top code**, then press and hold down the  button until the LED light turns on solid GREEN , then release the  button.


2. Now press and release the same button again  (TV) or  (Set-Top), that you pressed and released in Step 1.

3. The LED light will now flash back the stored code in the following manner.  
The First set of blinks represents the 100's part of the code.  
The Second set of blinks represents the 10's part of the code.  
The Third set of blinks represents the 1's part of the code.

## RECALLING YOUR CODE

For example, lets say the code is 109.  
The LED light would blink back as follows:

The first set of blinks =  then a brief pause, followed by

The second set of blinks =  (In this case, a Zero value causes the LED to flash quickly) then a brief pause, followed by




The third set of blinks =       

## CHANNEL CHANGING OPTIONS

**NOTE: This option may be needed only if you have programmed favorite channels into the weemote®.**

In some cases, your TV or Set-Top device may require extra "0" digits or an ending button like ENTER, OK, SELECT to change channels. Some devices may not need an ending button to change channels but if it used, the channel will change much faster.


The best way to tell if you should need to set this option is to take your existing remote and experiment with changing channels, using the 0-9 numeric keypad. Try different combinations with leading zeros, i.e. for channel 7 try 007 and for Set-Top devices, try buttons like ENTER, OK or SELECT. If you find that the channels work or change faster, then set the appropriate option you need below.


1. Press and hold down the  button until the LED light turns on solid GREEN , then release the  button.


## CHANNEL CHANGING OPTIONS


2. Press and release the MUTE  button. The LED light will blink once .


3. Press and release the following button, depending on which selection your device requires.

3a. For the ENTER button, press and release the Favorite  button.

3b. For the OK/SELECT button, press and release the Favorite  button.

3c. For the 3-Digit Option, press and release the Favorite  button. *With the option set, the weemote would send channel 7 as channel 007.*

3d. For the 4-Digit Option, press and release the Favorite  button. *With the option set, the weemote would send channel 7 as channel 0007.*

3e. To turn this option completely off, press and release the MUTE  button.

4. The LED light will blink    times and turn off to indicate that your option selection has been set.

## LEARNING BUTTONS

The weemote® allows you to learn selective buttons from your existing remotes to the following weemote buttons:

1. MUTE 
2. Volume Up/Down Control 
3. Dedicated Favorite Channel Buttons #1-#5




Need help? Go to [www.weemote.com](http://www.weemote.com) 9

## LEARNING BUTTONS

### HELPFUL TIPS:



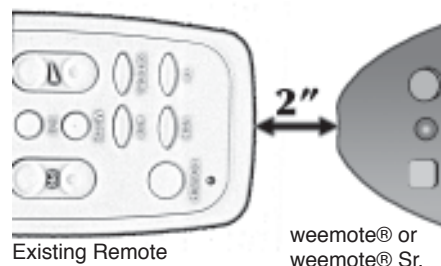












1. In order to use this feature, you must have an existing remote with the buttons you wish to learn with the weemote®
2. Your existing remote and the weemote® must be placed close together and aligned properly in order for the learning process to be successful. See the diagram below. You may need to try different distances between the weemote® and your existing remote. Try spacing anywhere from 1 inch to 4 inches. You may also need to raise or lower the front tip of your existing remote if it does not sit flat.
3. Lighting can be a problem. In particular, some fluorescent light fixtures can emit a fair amount of interference. If you have this type of lighting, try another location with different lighting.
4. For best results, make sure your batteries are in very good condition - both in your existing remote and the weemote®. Fresh Alkaline batteries are always recommended.
5. For the Favorite Channel Buttons, you can mix and match between learning buttons and programming favorite channels.



Need help? Go to [www.weemote.com](http://www.weemote.com) 10

## LEARNING BUTTONS

Before you begin, be sure to review Page 10.












1. Press and hold down the  button until the LED light turns on solid GREEN , then release the  button.
2. Press and release the MUTE  button. The LED light will blink once .
3. Press and Release the button you wish to learn on the **weemote**. In this case, we will press and release the Volume Up portion of the volume control. The light turns off Green and then turns back on RED.
4. Press and Release the button you wish to learn from your **existing remote**. In this case, press and release the Volume Up button. The LED light will blink once .
5. Press and Release the button you wish to learn from your **existing remote** again (*2nd time*). In this case, press and release the Volume Up button. The LED light will blink twice  .
6. Press and Release the button you wish to learn from your **existing remote** again (*3rd time*). In this case, press and release the Volume Up button. The LED light will blink    and then turn back on GREEN. At this point, you have successfully learned the Volume Up signal from your existing remote to the weemote.
7. To learn another signal, simply repeat Steps 3-6, pressing and releasing the applicable new buttons on your existing remote and weemote.
8. Once you are done learning buttons, simply press and release the  button. The light will blink    GREEN and go out to confirm you have exited the program mode.

*During Steps 4,5 and 6, the LED light may flicker RED fast. This indicates a learning error. If this occurs, you should try and repeat that step again. If the problem persists, please make sure you review Page 10.*














**Need help? Go to [www.weemote.com](http://www.weemote.com) 11**

## LEARNING BUTTONS

### CLEARING LEARNED BUTTONS

1. Press and hold down the  button until the LED light turns on solid GREEN , then release the  button.
2. Press and release the MUTE  button. The LED light will blink once .
3. Press and Release the button you wish to clear from your weemote 2 times. In this case, press and release the Volume Up button. The LED light will blink RED each time you press and release the button  .
4. To clear other learned buttons, simply press and release those buttons twice.
5. When you are done clearing learned buttons, Press and Release the  button. The light will blink    GREEN and then turn off.

### CLEARING FAVORITE CHANNELS

1. Press and hold down the  button until the LED light turns on solid GREEN , then release the  button.
2. If you want to clear favorite channels from 6-10, Press and release the MUTE  button. The LED light will blink once .
3. Press and Release the favorite channel button you wish to clear from your weemote 2 times.  
For Favorite Channel 6: Press and Release .  
For Favorite Channel 7: Press and Release .  
For Favorite Channel 8: Press and Release .  
For Favorite Channel 9: Press and Release .  
For Favorite Channel 10: Press and Release .  
The light will blink    GREEN and then turn off.

**Need help? Go to [www.weemote.com](http://www.weemote.com) 12**

## CLEARING YOUR CODE

Use the following steps to clear your TV or Set-Top code.

1A. To clear the TV code, Press and hold down the **A** button until the LED light turns on solid GREEN ●, then release the **A** button.

1B. To clear the Set-Top code, Press and hold down the **B** button until the LED light turns on solid GREEN ●, then release the **B** button.

2. Press and Release the Favorite Channel **1** button. The LED light will blink ●.

3. Press and Release the **A** button to clear the TV code or Press and Release the **B** button to clear the Set-Top code. The light will blink ●●● GREEN and go out to confirm you have cleared the code.

## DISABLING THE VOLUME CONTROL

1. Press and hold down the **B** button until the LED light turns on solid GREEN ●, then release the **B** button.

2. Press and release the MUTE □ button. The LED light will blink once ●.

3. Press and release the bottom part (Vol. Down) portion of the Volume Control. The light will blink ●●● GREEN and go out to confirm you have turned off the control. If the light blinks ●●● RED, then this indicates that the Volume Control has been turned back ON.

4. You can always go back and repeat the Steps above to alternate turning the Volume Control ON or OFF.

Need help? Go to [www.weemote.com](http://www.weemote.com) 13

## CHANNEL UP/DN OPTIONS

1. Press and hold down the **B** button until the LED light turns on solid GREEN ●, then release the **B** button.

2. Press and release the MUTE □ button. The LED light will blink once ●.

3. Press and release the button below that matches with the option setting you wish to use.

3A. Press and Release the bottom part of the Channel Control (Ch Down) to set this option to restrict channel control to only the favorite channels you have programmed into the weemote.

3B. Press and Release the top part of the Channel Control (Ch Up) to set this option to allow normal channel control - access to all available channels.

3C. Press and Release the **C** button followed by Pressing and Releasing the bottom part of the Channel Control (Ch Down) to set this option to totally disable channel control.

4. After performing Step 3A, 3B or 3C, the LED light will blink ●●● GREEN and go out to confirm the option has been set.

## POWER ON TO FAV. CH. 1

1. Press and hold down the **B** button until the LED light turns on solid GREEN ●, then release the **B** button.

2. Press and release the MUTE □ button. The LED light will blink once ●.






3. Press and release the Favorite **1** button. The light will blink ●●● GREEN and go out to confirm you have set the option. If the light blinks ●●● RED, then this indicates that this option has been turned off.

4. You can always go back and repeat the Steps above to alternate turning this option ON or OFF.



Need help? Go to [www.weemote.com](http://www.weemote.com) 14

## ADJUSTING CH. SPEED

This setting adjusts the speed at which the weemote sends out the favorite channel digits. You may need to slow down or speed up this value, depending on how your device responds to the normal setting. If the channel digits on your device are being dropped, then you need to use the slowest setting, if the digits stay on the screen a long time or the channel changes before all the digits are sent, then you need to use the fastest setting.





1. Press and hold down the **(B)** button until the LED light turns on solid GREEN ●, then release the **(B)** button.
2. Press and release the MUTE  button. The LED light will blink once .
3. Press and release the button below that matches with the option setting you wish to use.
- 3A. Press and Release the small number one button **1** in the program area to set this option for the **fastest speed**.
- 3B. Press and Release the small number ten button **10** in the program area to set this option for **normal (factory) speed**.
- 3C. Press and Release the one hundred button **100** in the program area to set this option for **slowest speed**.
4. After performing Step 3A, 3B or 3C, the LED light will blink    GREEN and go out to confirm the option has been set.

## ADJUSTING BUTTON DELAY








1. Press and hold down the **(B)** button until the LED light turns on solid GREEN ●, then release the **(B)** button.
2. Press and release the MUTE  button. The LED light will blink once .
3. Press and release the **(C)** button. The LED light will blink

**Need help? Go to [www.weemote.com](http://www.weemote.com) 15**

## ADJUST BUTTON DELAY

- once .
4. Press and release the button below that matches with the option setting you wish to use.
  - 4A. Press and Release the small number one button **1** in the program area to set this option for the **shortest delay**.
  - 4B. Press and Release the small number ten button **10** in the program area to set this option for **normal (factory) delay**.
  - 4C. Press and Release the one hundred button **100** in the program area to set this option for the **longest delay**.
  5. After performing Step 4A, 4B or 4C, the LED light will blink    GREEN and go out to confirm the option has been set.











## DEVICE POWER OPTIONS

1. Press and hold down the **(B)** button until the LED light turns on solid GREEN ●, then release the **(B)** button.
2. Press and release the MUTE  button. The LED light will blink once .
3. Press and release the button below that matches with the option setting you wish to use.
- 3A. **To turn off Set-Top powering**, Press and Release the RED Power button.
- 3B. **To turn off TV powering**, Press and Release the **(C)** button. The LED light will blink   GREEN and turn back on solid. Press and Release the RED Power button.
4. After performing Step 3A or 3B, the LED light will blink    GREEN and go out to confirm the option has been set.
5. To turn the Power back on to these devices, simply repeat the steps above to alternate setting the power ON or OFF.

**Need help? Go to [www.weemote.com](http://www.weemote.com) 16**

## POWER INPUT TV OPTION

This setting works when you are using a Set-Top device along with your TV. When the RED power button is pressed to turn on your TV and Set-Top, this option will send a command to the TV to make sure it is set to the correct input to receive the signal from your Set-Top device.



 

1. Press and hold down the **B** button until the LED light turns on solid GREEN ●, then release the **B** button.
2. Press and release the MUTE  button. The LED light will blink once .
3. Press and release the button below that matches with the option setting you wish to use.
- 3A. To have your TV set to channel 3, Press and Release the Favorite  button.
- 3B. To have your TV set to channel 4, Press and Release the Favorite  button.
- 3C. To have your TV send one TV input command, Press and Release the Favorite  button.
- 3D. To have your TV send two TV input commands, Press and Release the Favorite  button.
- 3E. To turn off any sending of TV commands, Press and Release the Favorite  button.
4. After performing Step 3A, 3B, 3C, 3D or 3E, the LED light will blink    GREEN and go out to confirm the option has been set.

**Note that the sending of video input commands (Steps 3C or 3D) may not work for certain codes. In these cases, we suggest you learn the Video Input command from your existing remote and apply it to one of the Favorite Buttons #1-#5 on the weemote**




## DIRECTV PRE-SETS

If you are a DirecTV subscriber, then this feature will allow you to quickly setup the weemote with a collection of predefined Favorite Channels for children. If you have a recent installation of DirecTV using a Satellite Receiver like the model D10, then this setting will also properly set the correct Set-Top code for your receiver. Regardless of which Sat. Receiver you use, all favorite channels will work. In the case of older installations, you will need to go back and enter in the proper Set-Top code for your device.

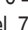


When this option is set, the following settings are applied:  
The Set-Top code of 257 is entered into the weemote  
The following favorite channels are defined:

- Favorite Channel  = 298 (Noggin)
- Favorite Channel  = 290 (Disney)
- Favorite Channel  = 296 (Toon)
- Favorite Channel  = 282 (Animal Planet)
- Favorite Channel  = 299 (Nickelodeon)
- Favorite Channel  = 292 (T Disney)
- \* Favorite Channel  = 295 (PBS Kids)
- \* Favorite Channel  = 302 (Nik Toons)
- \* Favorite Channel  = 294 (Kids)

*\* These channels are only defined when using the Total Choice Plus Package option setting.*


1. Press and hold down the **B** button until the LED light turns on solid GREEN ●, then release the **B** button.
2. Press and release the MUTE  button. The LED light will blink once .
3. Press and release the **C** button. The LED light will blink once .

## DIRECTV PRE-SETS

4. Enter the number below using the **100** and **1** button that matches with the option setting you wish to use.
  - 4A. Press and release the **100 100** twice (200) to pre-set your weemote to work with the **Total Choice Package**.
  - 4B. Press and release the **100 100** twice and the **1** once (201) to pre-set your weemote to work with the **Total Choice Plus Package**.
5. After performing Step 4A or 4B, Press and Release the **B** button. The LED light will blink    GREEN and go out to confirm the option has been set.


## FACTORY RESET

This reset clears all of your program settings and reloads any settings from the factory. If you have a special version weemote that has been pre-configured to work with your TV or Set-Top device, and you still want to keep those settings, then use this reset option, otherwise use the All Clear Reset below.

1. Press and hold down BOTH the **C** button and the MUTE button until the LED light turns flashes ORANGE , then release the buttons.

## ALL CLEAR RESET


This reset clears all of your program settings and any pre-set settings from the factory. Use this when you want to setup your weemote for a totally new installation.

1. Press and hold down BOTH the **A** button and the RED Power button until the LED light turns flashes ORANGE , then release the buttons.

**Need help? Go to [www.weemote.com](http://www.weemote.com) 19**

## FINDING YOUR VERSION

If you are having problems setting up your weemote, please refer to the Troubleshooting section on the following pages. If you can't find your answer in this manual, then please go online to [weemote.com](http://weemote.com) and select our support page. On this page, you will find the latest technical bulletins that may relate to your problem. You can also send us a trouble report from this site. In any of these cases, it is critical that you know the product code version you have. To locate that information, please refer to the diagram below.

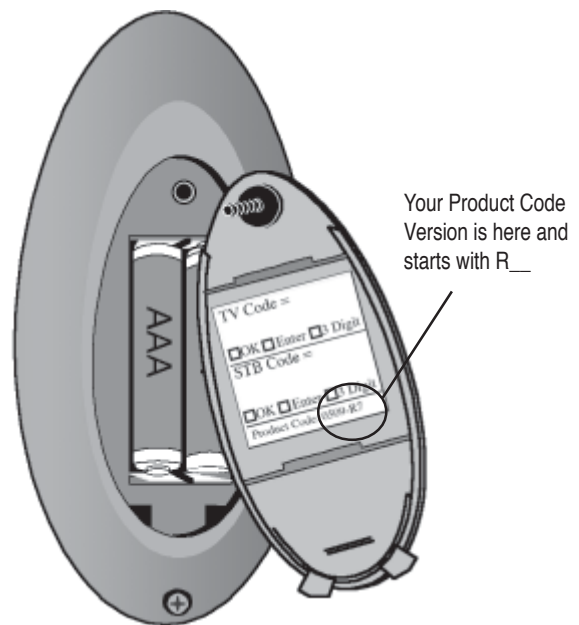

**Need help? Go to [www.weemote.com](http://www.weemote.com) 20**

## TROUBLESHOOTING

### 1. The LED does not light or flash?

Check to make sure you have installed the batteries properly. Check to make sure that the batteries are not dead or too weak to operate the weemote®.

### 2. The weemote® powers on my TV or SET-TOP but does not change channels?

The weemote® must have at least one channel programmed in order for channel changing to work. Press the channel buttons you programmed. If the LED does not light up brightly, i.e. the light is dim, then the channels have not been entered or programmed properly. Please go back and repeat entering your channels.

If your setup is TV only, make sure you did not program in a Set-Top code by mistake. Try clearing the STB code - See Page 13.

Check to make sure you have set the proper code in the weemote®. Sometimes a code will only partially work. Fully test each code as described in this manual.

### 3. I see the correct channel digits on my TV but the channel does not change?

Make sure you programmed in the channel changing option, depending on what your equipment needs. Some TV's or Set-Top boxes will not change channels until either 3/4 complete digits or an ENTER or OKAY command has been sent from the weemote®. See pages 8-9.

### 4. When changing channels, the channel numbers that are sent to the TV from the weemote® are not the same as what I programmed?

Check to make sure you have set the correct code in the weemote®. This happens frequently with Sony codes. The weemote is designed to output exactly the channel number you program in when pressing the channel buttons in normal operation. Keep trying other codes.

**Need help? Go to [www.weemote.com](http://www.weemote.com) 21**

## TROUBLESHOOTING

5. The channel digits on my TV or Set-Top display either the first or last digit I programmed in. For example, channel 57 shows up as channel 5 or 7?

It sounds like you may to make some speed adjustments in the weemote®. See Page 15.

6. Whenever I turn on the Set-Top box, the TV turns on, then back off.

Check to see if your TV is plugged into your set-top box. If so, plug it directly into an electrical outlet or delete the TV code - See Page 13.

6. The channel up/down button only goes to the channels I programmed in the weemote®?

The weemote® is factory set to limit channel access. See Page 14 for other options you can set.

7. I notice that sometimes the weemote® seems to get confused. Sometimes, the programmed channels get knocked out of alignment when the child is pressing the buttons too quickly?

You need to consider the following settings.

First, check to make sure whether you need to use channel changing option as described on page 8. Some TV's and Set-Tops will delay or not even change channels if these options are not set. If one of these options is needed and not set, channel changing will be unreliable.

Depending on your TV or Set-Top, the weemote® may be sending the channel changing information too slowly or your device may not be able to handle the rapid sending of favorite channel commands due to frequent pressing of the favorite channel buttons .

In these cases, please refer to pages 15 and 17. You may need to adjust one or both of these options, depending on your equipment. If the user presses the buttons too quickly, then you should consider setting the keypad delay to the longest delay setting.

**Need help? Go to [www.weemote.com](http://www.weemote.com) 22**

## CARE AND MAINTENANCE

1. Keep the weemote® dry. If it gets wet, wipe it dry immediately. Liquids may contain minerals that can corrode the case and electronics.
2. Use and store the weemote® only in normal temperature environments. Temperature extremes can shorten the life of the electronics, warp the plastic body and cause the batteries to leak.
3. Keep the weemote® away from excessive dust, dirt or sand. Exposure to these elements can cause the keypad to work erratically or fail altogether.
4. Even though the weemote® was designed to handle above average shocks, dropping the unit frequently can cause the case to crack as well as the internal electronics to malfunction.
5. Use only fresh batteries and take them out if you do not plan to use the weemote® for long periods of time. Batteries that leak can cause extensive damage to the Weemote®.
6. Wipe the weemote® with a damp cloth occasionally to keep it looking new. Do not use harsh chemicals, cleaning solvents, or strong detergents as they may cause permanent damage to the weemote's finish.

Modifying or tampering with the weemote's internal components can cause malfunction and may invalidate your warranty. If your weemote® is not performing properly, please complete a trouble report at our Customer Support page on our website.

## LIMITED WARRANTY

Fobis Technologies Inc. ("FOBIS") warrants, to the original purchaser only, that this product will be free from defects in materials and workmanship, under normal use, for ninety (90) days from the date of original purchase.

This warranty does not cover damage or failures caused by products or services not supplied by FOBIS, or which result from accident, misuse, abuse, neglect, mishandling, misapplication, faulty installation, setup adjustment, improper maintenance, alteration, maladjustment of consumer controls, modifications, commercial use, or that is attributable to acts of GOD.

There are no express warranties except as listed above. FOBIS SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

To obtain warranty service for a defective product during the warranty period, please return the product, preferably in the original package, along with your purchase receipt, to the company of your original purchase. A note detailing the complaint would be helpful. The store, at its option, will replace or repair this product if found to be defective.

Fobis Technologies Inc.  
(305) 253-8387  
Email: [info@fobis.com](mailto:info@fobis.com)