

Product Code Version 7.5 Addendum Sheet

Please note this does not replace our core manuals. You must use this along with our Version 7 Quickstart and Reference manuals. *NEW: For the latest codes available, please be sure to visit our searchable database on the web at: <http://www.weemote.com/codesearch>*

1. We have added extensive support for DTV converter boxes. Please note those codes below.

Access HD	283	Artec	284			
Channel Master	285	COSHIP	286			
Digital Stream	287	GE	288			
Goodmind	289	Insignia	290			
Lasonic	291	Magnavox Models	100MG9	292	100MW9	293
Microgem	294	RCA	295			
Sansonic	296	Skardin	297			
Tivax	298	Philco	292			
Zentech	297	Zenith	290			

2. We have added the ability to add a “dash” signal to your favorite channels when using one of these DTV converter boxes. Please refer to page 11 of the Quickstart guide and when needing to enter a “dash” signal during programming, use the “B” button. For example, to enter channel 10-1, press and release the “10” button, followed by pressing and releasing the “B” button (for the dash) and then finally pressing and releasing the “1” button.

3. We have added the ability to learn the Power signal from your TV. Please refer to the instructions on learning in the attached reference guide on page 9. For those customers who have both a TV and Set-Top device setup, and can't find a matching TV code, you can now learn all the critical signals needed (Power, Volume +/- and MUTE) to operate your TV.

4. When learning volume signals, the weemote will now repeat sending that signal as long as you are holding the button down. This is the same behavior you would expect from a standard remote. Older weemote® versions required that you press and release the button each time to adjust the volume (when learning the signal only).