

LIMITED WARRANTY

Fobis Technologies Inc. ("FOBIS") warrants, to the original purchaser only, that this product will be free from defects in materials and workmanship, under normal use, for ninety (90) days from the date of original purchase.

This warranty does not cover damage or failures caused by products or services not supplied by FOBIS, or which result from accident, misuse, abuse, neglect, mishandling, misapplication, faulty installation, setup adjustment, improper maintenance, alteration, maladjustment of consumer controls, modifications, commercial use, or that is attributable to acts of GOD.

There are no express warranties except as listed above. FOBIS SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

 
To obtain warranty service for a defective product during the warranty period, please return the product, preferably in the original package, along with your purchase receipt, to the company of your original purchase. A note detailing the complaint would be helpful. The store, at its option, will replace or repair this product if found to be defective.

Fobis Technologies Inc.
(305) 253-8387
Email: support@fobis.com

Need help? Go to www.weemote.com 16

Fobis Technologies Inc.

"designing gadgets for real life"

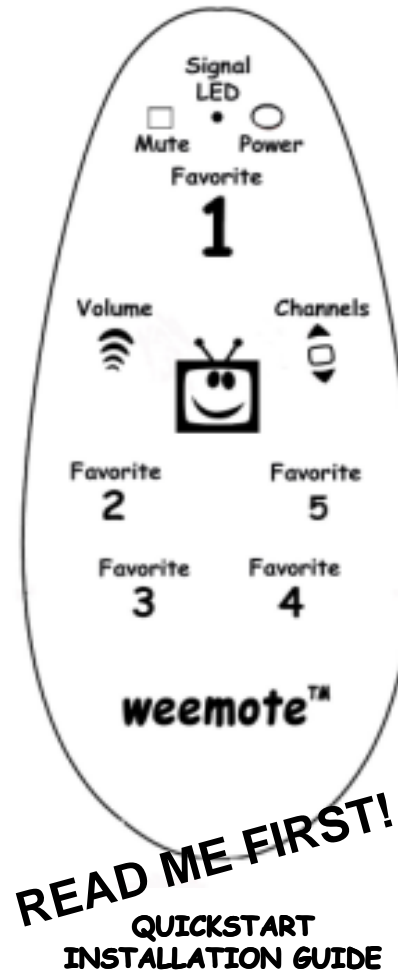

© 7/00, Property of Fobis Technologies Inc.
Rev. E/0700

patent pending
Weemote® is a registered trademark



INTRODUCTION

This installation guide is designed to get your Weemote® configured as quickly as possible.

The companion “REFERENCE GUIDE” provides more detail for those who need more information, have complex entertainment systems or wish to further customize the Weemote’s setup. It also contains the TV and Set-Top codes needed to configure your Weemote®.

You will need to refer to Reference Guide to find your TV and Set-Top codes. Just follow the steps in this guide and we will instruct you whenever the Reference Guide is needed.

We welcome your feedback on our manual. If you have any suggestions, please email us at info@fobis.com.

If you run into any difficulty, please visit our web site at www.weemote.com for the latest updates and technical bulletins.

We also encourage you to register your weemote so we can inform you of other cool gadgets we are working on. You can register online at our web site or fill out and mail the enclosed post card.

Enjoy your Weemote®!

The Fobis Team



CARE AND MAINTENANCE

Modifying or tampering with the Weemote’s internal components can cause malfunction and may invalidate your warranty. If your Weemote® is not performing properly, please complete a trouble report at our Customer Support page on our website.

CARE AND MAINTENANCE

1. Keep the Weemote® dry. If it gets wet, wipe it dry immediately. Liquids may contain minerals that can corrode the case and electronics.

2. Use and store the Weemote® only in normal temperature environments. Temperature extremes can shorten the life of the electronics, warp the plastic body and cause the batteries to leak.

3. Keep the Weemote® away from excessive dust, dirt or sand. Exposure to these elements can cause the keypad to work erratically or fail altogether.

4. Handle the Weemote® with care. Dropping the unit frequently can cause the case to crack as well as the internal electronics to malfunction.

5. Use only fresh batteries and take them out if you do not plan to use the Weemote® for long periods of time. Batteries that leak can cause extensive damage to the Weemote®.

6. Wipe the Weemote® with a damp cloth occasionally to keep it looking new. Do not use harsh chemicals, cleaning solvents, or strong detergents as they may cause permanent damage to the Weemote's finish.

Need help? Go to www.weemote.com 14

STEP 1

BEFORE YOU BEGIN

1. If you have a cable-ready TV

COMPLETE Steps 1-9 in this guide

2. If you have a cable-ready TV connected to a Set-Top box

COMPLETE Steps 1-13 in this guide

NOTE: Set-Top connections are only supported if your TV is using a standard antenna connection and your TV is always set to channel 3 or 4. **Your Set-Top cannot be connected to the video port of your TV.**

3. If you have a Set-Top box connected to an older TV that has a manual tuner.

COMPLETE Steps 1-5 and 10-13 in this guide

You can find more information on the supported entertainment systems in the Reference Guide, Pages 5-7.

NOTE: This model Weemote® will not work if you are using a VCR's tuner as your primary method of changing channels or you have a TV with a built-in VCR. Please check our web site for the latest support of these devices.

Need help? Go to www.weemote.com 3

STEP 2 WHAT YOU NEED

1. The Weemote®
2. This Guide
3. Battery Sticker
4. *A miniature philips head screwdriver
5. *2 AAA Batteries (NEW FOR BEST RESULTS)



* Items 4 and 5 are not included in your weemote package

STEP 3 REMOVING THE BATTERY COVER AND SETUP COVER

Refer to the diagrams on the next page, figures A-D. Note that the screws are designed to remain on the covers so they don't get lost. Take care not to over tighten the screws when you put the covers back on.

NOTE: You cannot setup the Weemote® until the setup cover is removed.

Need help? Go to www.weemote.com

4

STEP 12 TEST THE SET-TOP CODE

IMPORTANT NOTE: If your Set-Top box is set to use Channel 4 on your TV, then please refer to Page 14 of the Reference Guide to set the Channel 4 option.

1. Make sure your Set-Top box is turned off.
2. Point the Weemote® at your Set-Top box and press the Power (red) button. The Set-Top box should go on. Now, check the volume up/down button as well as the channel up/down button. If all these functions work, then you have the right code for your Set-Top box.

If any of the functions above do not work, then you will need to try another Set-Top code. Go back and repeat Step 10.

STEP 13 FINISHING UP

1. Write the Set-Top code down on the battery sticker located behind the battery door.
2. Go ahead and reattach the Setup area cover and battery cover. **DO NOT OVERTIGHTEN THE SCREWS!!!**

Need help? Go to www.weemote.com

13

STEP 10

CONTINUED

8. Press the RED power button to see if the Set-Top box turns off. If it does not, then go back to the beginning of Step 10, using the next code number listed for your manufacturer. If you have run through all the possible codes and still cannot get the Set-Top box to power off, then please refer to page 8 of the Reference Guide to search for your code.

STEP 11

HOW DO YOU USE YOUR EXISTING SET-TOP REMOTE CONTROL?

1. DO YOU USE THE ENTER KEY TO CHANGE CHANNELS?

YES: Please refer to page 15 of the Reference Guide to set the Enter Option.

NO: Skip to Step 12.

2. WHEN YOU CHANGE CHANNELS, DO YOU USE ALL THREE DIGITS REGARDLESS OF THE CHANNEL NUMBER, I.E. CHANNEL 7 IS ENTERED ON YOUR REMOTE AS "007"?

YES: Please refer to page 16 of the Reference Guide to set the 3-Digit Option.

 
NO: Skip to Step 12.

Need help? Go to www.weemote.com

12


STEP 3

CONTINUED

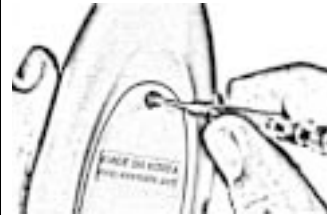

Removing the battery door
Fig. A

 Removing the setup cover
Fig. B

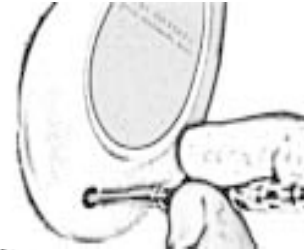

Pull down to remove setup cover
Fig. C



Weemote® setup buttons
Fig. D



Need help? Go to www.weemote.com

5

STEP 4

WRITE DOWN YOUR CHILD'S FAVORITE CHANNELS

Take a moment now to write down the channels you want to setup below. You do not need to setup all five.

1	_____	4	_____
2	_____	5	_____
3	_____		

APPLICATION FOR EASIER MOVIE VIEWING WITH THE WEEMOTE®

The Weemote's mute button (top gray square button next to the power button) can be programmed to be used as a sixth favorite channel.

In this application, you could program that button to go to either channel 3 or 4, depending on which channel you use to output your VCR signal. Now the child can pop the tape into the VCR, hit the play button and then press the weemote's square gray button to ensure that the TV will display the movie from the VCR deck. To do this, see Step 5 and refer to Page 17 of the Reference Guide

Need help? Go to www.weemote.com 6

STEP 10

SETTING YOUR SET-TOP CODE

1. Turn your Cable Set-Top or Satellite Set-Top box on.
2. Please refer to the Set-Top Codes listed in the Reference Guide on Pages 29-34. If you cannot find your brand Set-Top box listed here, then please refer to page 8 of the Reference Guide to search for your code.
3. Locate the first code for your brand Set-Top.
4. Press the "STB" button for three seconds until the LED light starts flashing
5. Enter the Set-Top Code number. In our example, we are using the Scientific Atlanta code number 003.
6. Press the "1" button 3 times = 3
In this example, there is no need to use the "100" and "10" buttons as the channel number is below 10.
7. Press the "STB" button again to set the code. The LED should flash three times and then turn off.

Need help? Go to www.weemote.com 11

STEP 8

TEST THE TV CODE

1. Make sure your TV is turned off.
2. Point the Weemote® at your TV and press the Power (red) button. The TV should go on. Now, check the volume up/down button as well as the channel up/down button. If all these functions work, then you have the right code for your TV.

If any of the functions above do not work, then you will need to try another TV code. Go back and repeat Step 6.

NOTE: When you are finished testing and you are using a Set-Top box with your system, then you will need to return the TV back to channel 3 or 4, depending on your setup.

STEP 9

LAST STEP FOR TV ONLY USERS!

1. Write the TV code down on the battery sticker located behind the battery door.
2. **If you are also using a Set-Top box, then you will need to proceed directly to STEP 10.**
3. Go ahead and reattach the Setup area cover and battery cover. **DO NOT OVERTIGHTEN THE SCREWS!!!**

Need help? Go to www.weemote.com 10

STEP 5

PROGRAM YOUR FAVORITE CHANNELS

1. Press the "FAV" button for about three seconds until the LED light begins to flash.
2. Press the favorite channel button you wish to program - in this example we are using the (Green) Button Number "1" to program in channel 127.
3. Press the "100" button 1 time = 100
4. Press the "10" button 2 times = 20
5. Press the "1" button 7 times = 7
6. Press the Favorite Channel (Green) Button Number "1" again to complete the sequence. The LED will flash three times and then go out to confirm that the channel has been programmed.

Example 2: Lets say the channel number you want to use is 7.

In this case, you only need to press the "1" button 7 times = 7

There is no need to use the "100" and "10" buttons as the channel number is below 10.

To setup the other favorite channels, simply use the steps above except that for Steps 2 and 6, you would substitute the Green Number 1 button for the other favorite channel button (2,3,4 or 5) you wish to program.

Need help? Go to www.weemote.com 7

STEP 6 **SETTING YOUR TV CODE**

1. Turn your TV on.
2. Please refer to the TV CODES listed in the Reference Guide on pages 20-28. If you cannot find your brand TV listed here, then please refer to page 8 of the Reference Guide to search for your code.
3. Locate the first code for your TV. For this example, we will use the code 109 which is the first listed for a SONY brand TV.
4. Press the "TV" button for three seconds until the LED light starts flashing
5. Enter the Code number. In our example, we are using the SONY code number 109.

Press the "100" button 1 time = 100
Press the "1" button 9 times = 9
You do not use the "10" button in this case.
6. Press the "TV" button again to set the code. The LED should flash three times and then turn off.

Need help? Go to www.weemote.com 8

STEP 6 **CONTINUED**

7. Press the RED power button to see if the TV turns off. If it does not, then go back to the beginning of Step 6, using the next code number listed for your manufacturer. If you have run through all the possible codes and still cannot get the TV to power off, then please refer to page 8 of the Reference Guide to search for your code.

STEP 7 **HOW DO YOU USE YOUR EXISTING TV REMOTE CONTROL?**

1. DO YOU USE THE ENTER KEY TO CHANGE CHANNELS?
YES: Please refer to page 15 of the Reference Guide to set the Enter Option.
NO: Skip to Step 8.
2. WHEN YOU CHANGE CHANNELS, DO YOU USE ALL THREE DIGITS REGARDLESS OF THE CHANNEL NUMBER, I.E. CHANNEL 7 IS ENTERED ON YOUR REMOTE AS "007"?
YES: Please refer to page 16 of the Reference Guide to set the 3-Digit Option.
NO: Skip to Step 8.

Need help? Go to www.weemote.com 9